



LEVEL



FLOW



PRESSURE



TEMPERATURE



ELECTRONICS



Датчики потока серии FLOW – FCM

Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89
 Иваново (4932)77-34-06

Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16

Казахстан (7273)495-231

Пермь (342)205-81-47
 Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13

Таджикистан (992)427-82-92-69

 
Сургут (3462)77-98-35
 Тверь (4822)63-31-35
 Томск (3822)98-41-53
 Тула (4872)74-02-29
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Ярославль (4852)69-52-93

Единый адрес для всех регионов: vck@nt-rt.ru || <https://valco.nt-rt.ru/>

GENERAL CHARACTERISTICS



The flow switch FCM was built to enable a simple control of the flow rate and a fast signal in the absence of flow. The electrical part is physically separate from the mechanical and the contact is magnetically actuated. The electric head has a bayonet fixing system and, in case of necessity, can be replaced without removing the instrument from its installation.

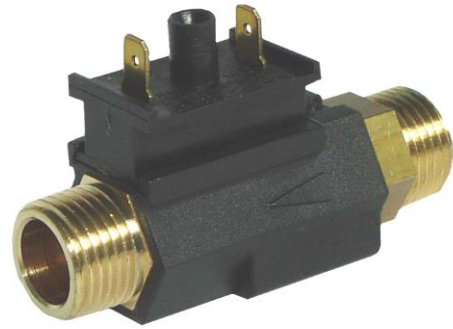

- No calibration needed.
- Easy replacement of the electrical contact.
- Low pressure loss.
- Versions for both vertical and horizontal operation.
- Can be used both with liquids and gases.



GV		Vertical mounting with flow direction from bottom to top.
GO		Horizontal or vertical mounting with flow direction from bottom to top

TECHNICAL DATA Tab.1

			Code
Body	Hexagonal bar	Brass	-
Process connection	1/2" Gas-M - UNI 228/1		15
Sensor	Piston	PP	-
Accuracy	± 15% of setting value		-
Max. Temperature	90°C		-
Pressure loss	0,5 bar with max. flow rate		-
Max. Flow rate	25 l/min	All ranges	-
Max. pressure	250 bar (*)		-
Mounting	Vertical		GV
	Horizontal		GO
Weight	170 g		-

(*) Higher pressures on request.

  DIMENSIONS mm.

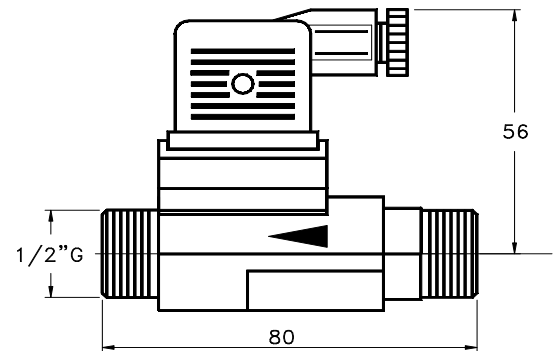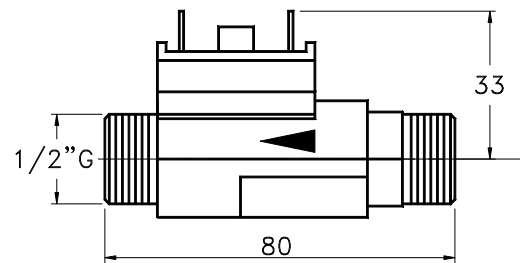

AVAILABLE SETTINGS Tab.2

GV			GO			N.
Settings l/min			Settings l/min			
Nominal	ON	OFF	Nominal	ON	OFF	
0,8	0,8	0,7	2,5	2,8	1,7	6
1	1,1	1	3	3,3	2	5
1,5	1,7	1,6	4	4,2	2,9	1
2	2,1	2	5	5,2	3,2	2
2,5	2,6	2,4	6	6,3	4,1	3
3	3,2	3,1	7	7,4	4,4	4

ELECTRICAL DATA Tab.3

Reed contact	N.O.	No flow rate	
Reed contact data	300 Vac	70 VA	0,5 A
Connection	Faston	6,3 mm.	
DIN plug protection	IP65	On request	KIT
The DIN cap is supplied in a separate kit			

INSTALLATION AND MAINTENANCE

Drain the hydraulic circuit before installation. Do not mount the switch in direct contact with ferromagnetic surfaces. Proceed with the assembly, taking care to use only a hexagonal wrench for fixing metal fittings. In case of electrical failure replace the electrical head making sure of the happened hooking bayonet.

NOMENCLATURE

FCM 3	2,5	15 GV
•		
	•	
		•
KIT/FCM		

Tab.2 Name + N. of setting

Tab.2 Nominal setting l/min

Tab.1 Process connection + Type of installation

Tab.3 DIN cap optional mounting kit

По вопросам продажи и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Казахстан (7273)495-231

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Таджикистан (992)427-82-92-69

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: vck@nt-rt.ru || <https://valco.nt-rt.ru/>



LEVEL



FLOW



PRESSURE



TEMPERATURE



ELECTRONICS